

INSTALLATION INSTRUCTIONS

1. THIS LUMINAIRE CAN BE CEILING, END, OR WALL MOUNTED TO 3-0 OR 4-0 JUNCTION BOXES. OPTIONAL PENDANT CEILING MOUNTING KIT IS AVAILABLE.
2. REMOVE LAMPHOLDER/REFLECTOR ASSEMBLY FROM LUMINAIRE BY PRESSING ON FRONT TO DISENGAGE LANCES.

CEILING/END MOUNT

3. REMOVE CENTER KNOCKOUT FROM TOP FOR CEILING MOUNT OR REMOVE KNOCKOUT FROM DESIRED END
4. FASTEN CANOPY TO HOUSING END/TOP WITH HEX HEAD CHASE NIPPLE AND LOCK NUT.
5. FEED BLACK AND WHITE LUMINAIRE LEADS THROUGH HEX HEAD CHASE NIPPLE AND CANOPY. ATTACH LAMPHOLDER/REFLECTOR ASSEMBLY TO LUMINAIRE.
6. ATTACH END/CEILING MOUNTING BAR TO JUNCTION BOX WITH SUPPLIED SCREWS.
7. ATTACH GROUND LEAD FROM JUNCTION BOX TO GREEN GROUND SCREW AND CUP WASHER. CONNECT BLACK LEAD FROM LUMINAIRE TO BLACK LEAD FROM JUNCTION BOX AND WHITE LEAD FROM LUMINAIRE TO WHITE LEAD FROM JUNCTION BOX WITH WIRE NUTE (NOT SUPPLIED)
8. FASTEN CANOPY TO MOUNTING BAR WITH TWO SCREWS.
9. INSTALL LAMPS AND FACE PLATE.


WALL MOUNT

3. REMOVE LARGE KNOCKOUT IN CENTER OF BACK PLATE AND APPROPRIATE JUNCTION BOX KNOCKOUTS
4. SNAP PLASTIC BUSHING INTO CENTER HOLE.
5. FEED BLACK AND WHITE LAMPHOLDER LEADS THROUGH PLASTIC BUSHING. CONNECT BLACK LEAD FROM LUMINAIRE TO BLACK LEAD FROM JUNCTION BOX AND WHITE LEAD FROM LUMINAIRE TO WHITE LEAD FROM JUNCTION BOX WITH WIRE NUTE (NOT SUPPLIED). FEED GROUND LEAD FROM JUNCTION BOX THROUGH PLASTIC BUSHING.
8. FASTEN LUMINAIRE TO JUNCTION BOX WITH TWO SCREWS.
9. CONNECT GROUND WIRE FROM JUNCTION BOX TO GREEN GROUND SCREW AND CUP WASHER IN GROUND SCREW KNOCKOUT IN GROUND SCREW KNOCKOUT IN BACK OF LUMINAIRE HOUSING.
10. ATTACH LAMPHOLDER/REFLECTOR ASSEMBLY TO LUMINAIRE HOUSING.
11. INSTALL LAMPS AND FACE PLATE.


INSTALLATION INSTRUCTIONS

IMPORTANT SAFEGUARDS

- READ AND FOLLOW ALL SAFETY INSTRUCTIONS
- DO NOT MOUNT NEAR GAS OR ELECTRIC BREAKER
- BEFORE WIRING TO POWER SUPPLY, TURN OFF ELECTRICITY AT FUSE OR CIRCUIT BREAKER
- FIXTURE MUST BE GROUNDED TO AVOID POTENTIAL ELECTRIC SHOCK
- DISCONNECT A.C. POWER BEFORE SERVICING
- EQUIPMENT SHOULD BE MOUNTED IN LOCATION AND AT HEIGHTS WHERE IT WILL NOT READILY BE SUBJECTED TO TAMPERING BY UNAUTHORIZED PERSONNEL
- ALL SERVICING SHOULD BE PERFORMED BY A QUALIFIED PERSONNEL
- THE USE OF ACCESSORY EQUIPMENT NOT RECOMMENDED BY THE MANUFACTURER MAY CAUSE AN UNSAFE CONDITION
- CONSULT YOUR LOCAL BUILDING CODE FOR APPROVED WIRING AND INSTALLATION
- DO NOT USE OUTDOORS
- DO NOT USE THIS EQUIPMENT FOR OTHER THAN INTENDED USE

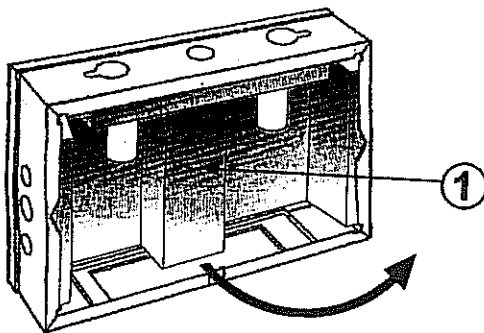

- ① REFLECTOR/LAMPHOLDER ASSEMBLY
- ② LUMINAIRE LEADS
- ③ SCREWS 8-32 X 1/2 (2)
- ④ GREEN GROUND SCREW AND CUP WASHER
- ⑤ MOUNTING BAR
- ⑥ HEX HEAD CHASE NIPPLE AND LOCKING NUT
- ⑦ CANOPY
- ⑧ PLASTIC BUSHING (WALL MOUNT ONLY)
- ⑨ JUNCTION BOX SCREWS - NOT PROVIDED
- ⑩ FACE PLATE

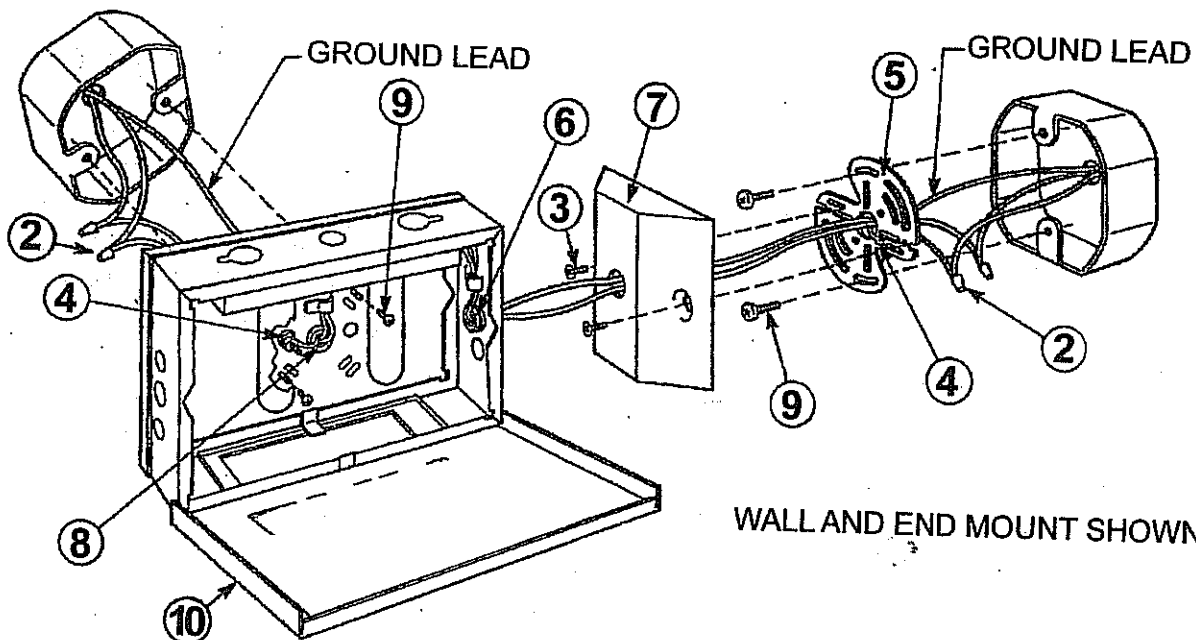

WALL AND END MOUNT SHOWN