


# ILLUMINATED DOOR SIGNS SPEC SHEET



Product: Illuminated Door Signs  
Model(s): SLU-XR, SLU-DK, SLU-CT, SLU-MR, SLU-XS, SLU-DS  
Mounting: Wall, End or Ceiling

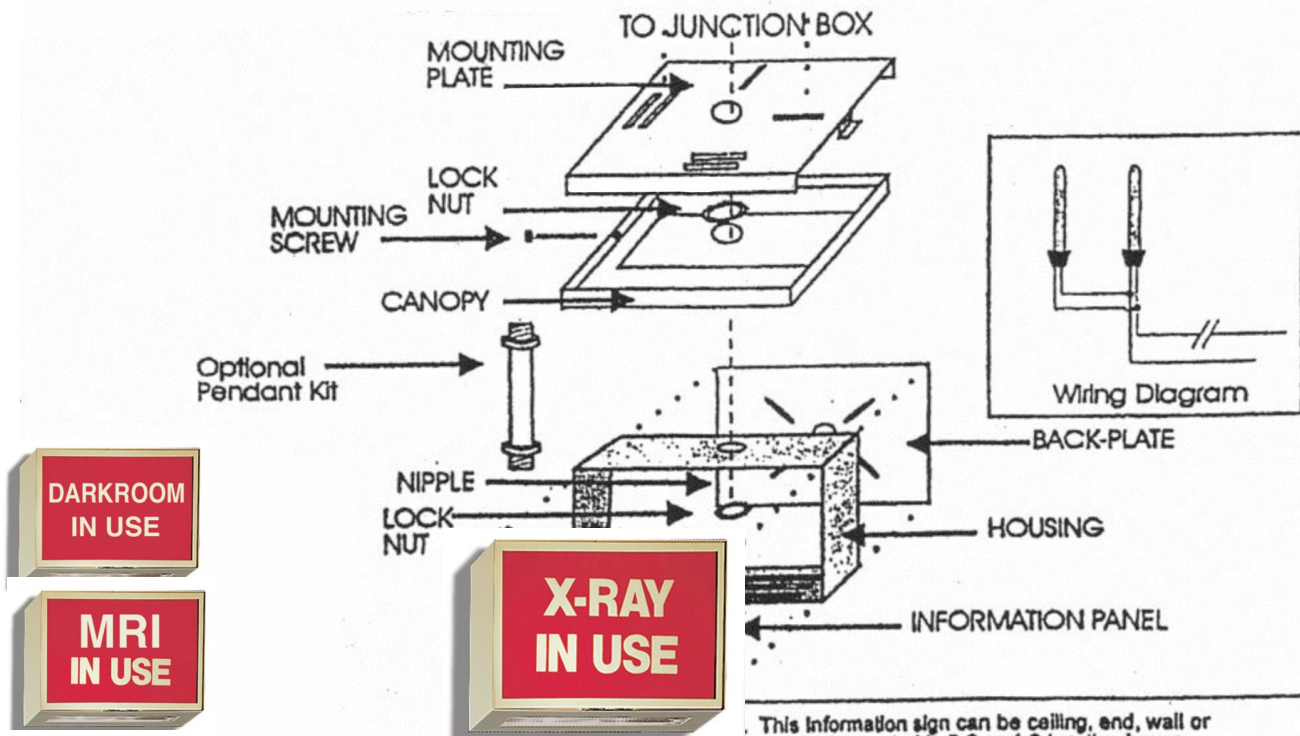

- This information sign can be ceiling, end, wall or pendant mounted to 3-0 or 4-0 junction boxes.
- Ceiling or End Mounting:** Attach end/ceiling mounting plate to junction box with supplied screws. Fasten canopy to housing with hex head chase nipple and lock nut. Feed wire through chase nipple. Slide mounting plate tab into slot in canopy; tighten mounting screw.
  - Pendant Mounting:** Install as for ceiling mounting, replacing chase nipple with pendant kit.
  - Wall Mounting (single face units only):** Universal back plate is supplied and is attachable to the housing. Feed wire through back and fasten unit to junction box with supplied screws.
- Make all electrical connections. Install lamps furnished with unit.
  - Place information face over housing and screw together..

## SPECIAL INFORMATION:

- Do not use outdoors, and for other than intended use..
- Do not mount near gas or electric heaters.
- Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
- Use of accessory equipment is not recommended by the manufacturer and may cause an unsafe condition.
- Servicing of this equipment must be performed by qualified service personnel.

<b>HOUSING -</b>	<b>Material:</b>	Steel alloy
	<b>Construction:</b>	Welded extrusions
	<b>Finish:</b>	Baked enamel
	<b>Color:</b>	Off-White
<b>ELECTRICAL -</b>	<b>Power Input:</b>	120V
	<b>Connection:</b>	Knockouts on top, end, and backplate.
<b>LIGHTING -</b>	Two 10WT6 1/2 bulbs supplied. Downlight feature is standard.	
<b>DIMENSIONS</b>	7 1/4" x 11 1/2" x 2 1/2" (18.4 x 29.2 x 6.4 cm)	
<b>SHIP WEIGHT:</b>	4.0 lbs. (1.8 cm)	
<b>TESTING -</b>	UL listing.	

**TECHNO-AIDE, Inc.**  
7117 Centennial Blvd.  
Nashville, Tennessee 37209  
615-350-7030